


# SPACE HEATING TIME CLOCK

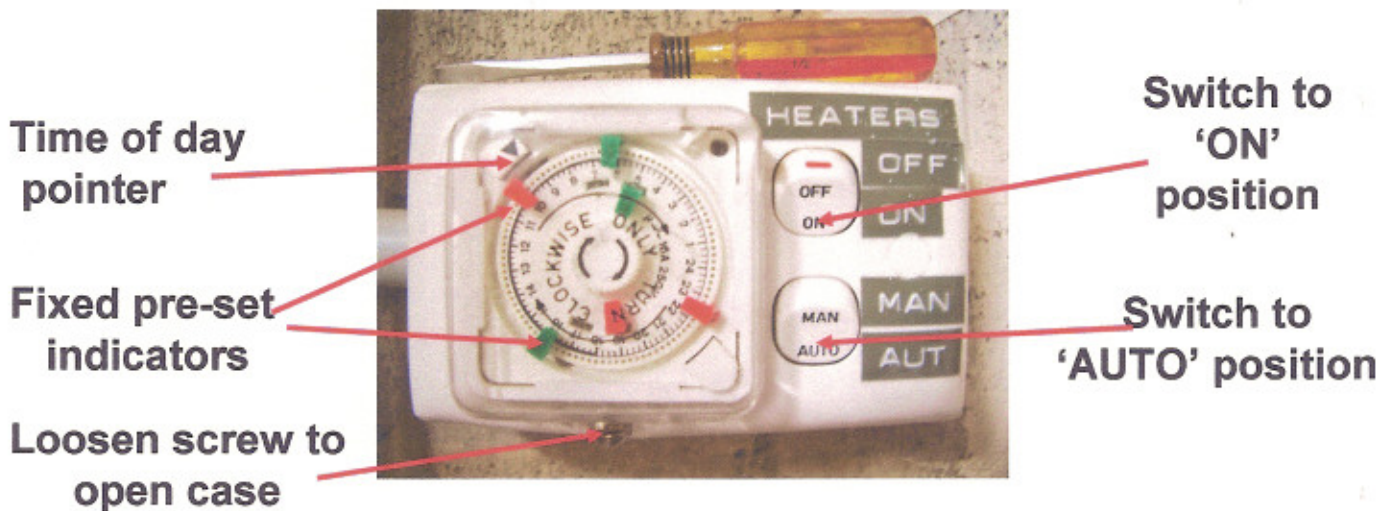

The Space Heating Time Clock controls the water pump that pumps the hot water to the heaters in the bedrooms and the main living area.

It must be set to the correct 'time of day' and the switches on the RHS set to 'ON' and 'AUTO'

To set the correct 'time of day', loosen the screw at the base of the clock and open the hinged case. Rotate the clock in a clockwise direction until the pointer matches the correct time. (make sure correct day or night time is set).

When the switch is in the 'AUTO' position the water recirculation pump will start and stop according to the fixed pre-set indicators. If 'manual' is selected, this will over-ride the pre-set indicators and the water pump will pump continually, thus wasting power and costing huge dollars.